

Model 59002

Muti-Purpose Tester

Operating Instruction

1. TESTING BATTERIES

Place AAA, A, C, D and button batteries where indicated **(1)** and **(5)** on the illustration. Place 9 volt battery where indicated **(2)** on the illustration with + and - terminals in the right position (observe the polarity of the battery). Read battery condition on meter.

2. TESTING BULBS/FUSES

Place bulb/fuse where indicated **(3)** or **(4)** depending on size /style. Meter indicates condition of bulb/fuse.

3. TESTING FOR CONTINUITY

Turn off circuit power before testing. Touch the probes, see number (6) on the illustration, to the test points. In **continuity** and/or **ohm** test, the beeper sounds continuously, if the resistance is less than 20K ohm.

